


Disassemble Effluent Bearing


Valid for Hydrotech Filters HSF2200/HSF2600

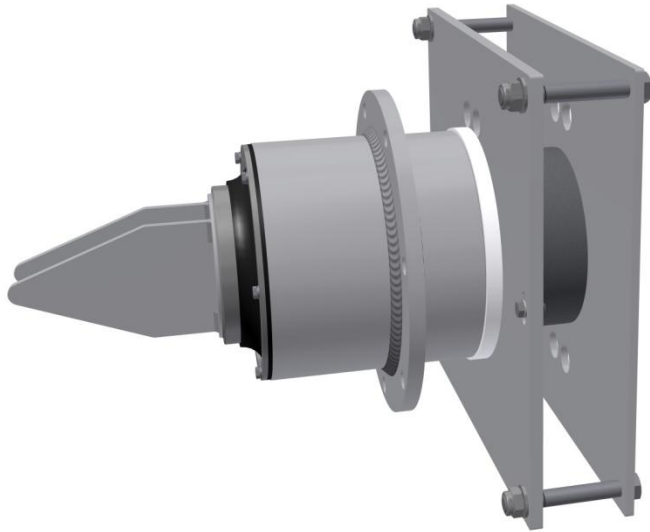

Solutions & Technologies


Disassemble Effluent Bearing

- Split the drive chain

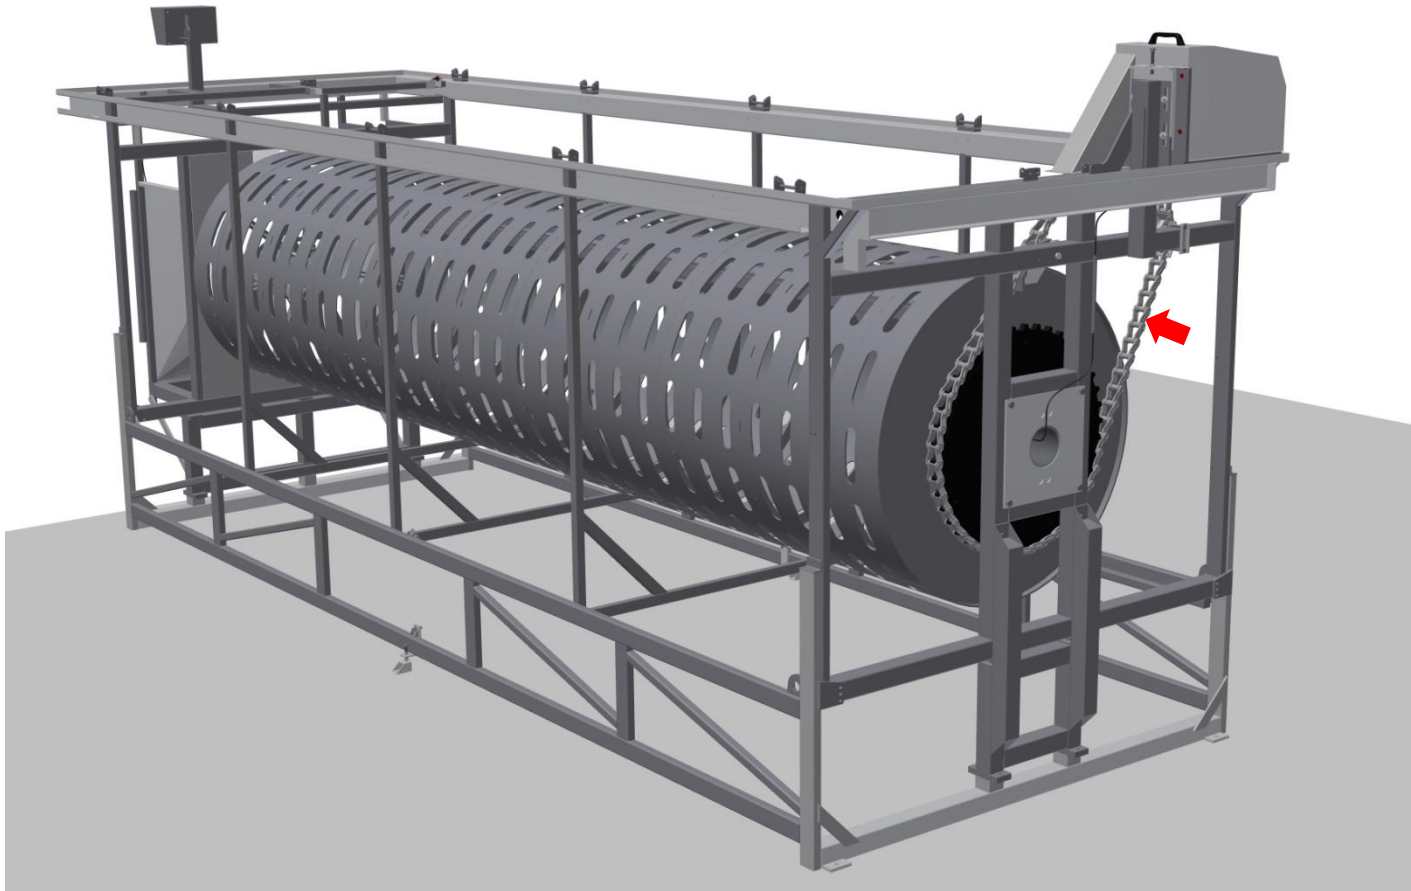


Disassemble Effluent Bearing

- Remove the chain support

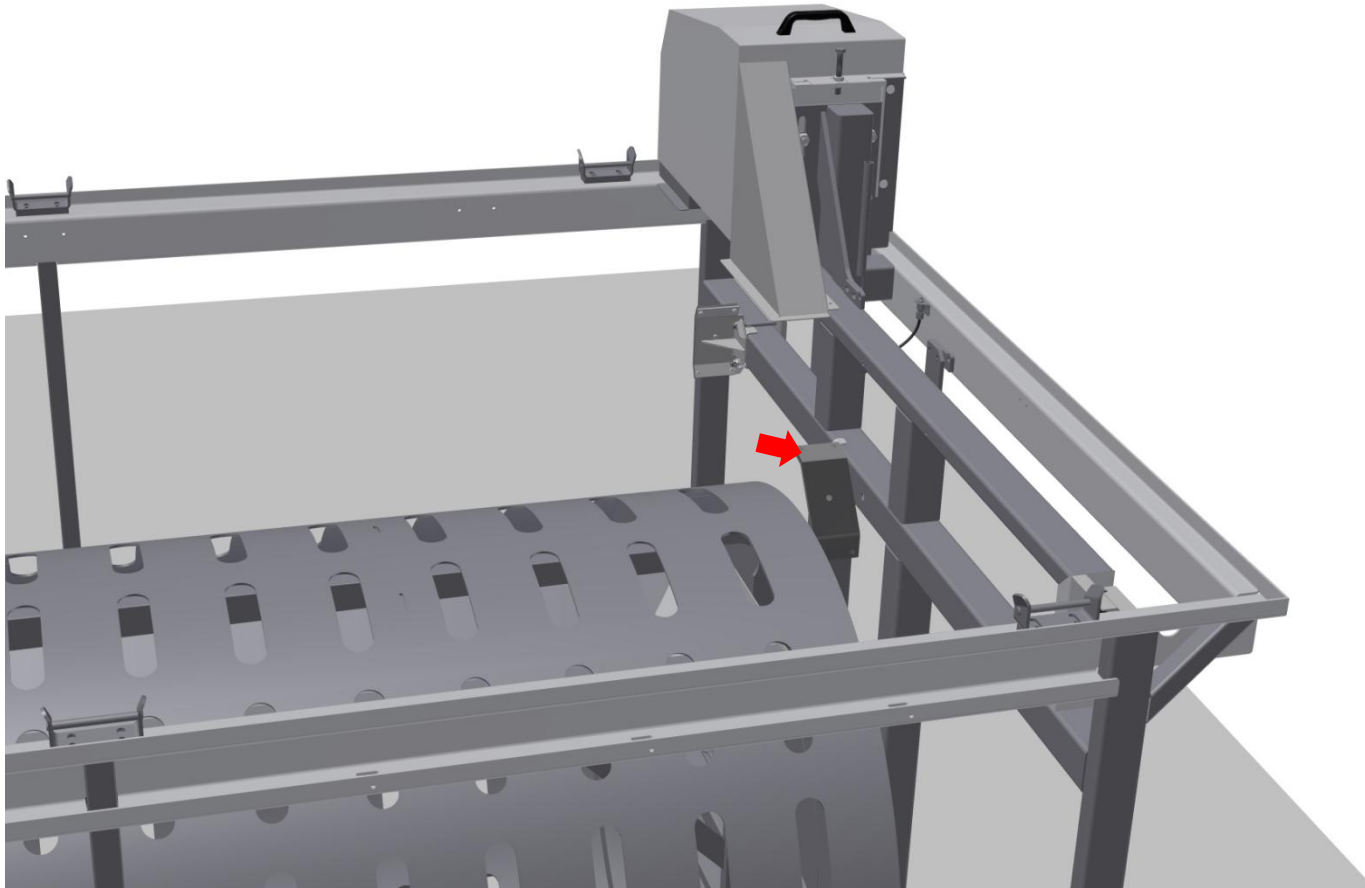


Disassemble Effluent Bearing

- Mount the drum lifting device

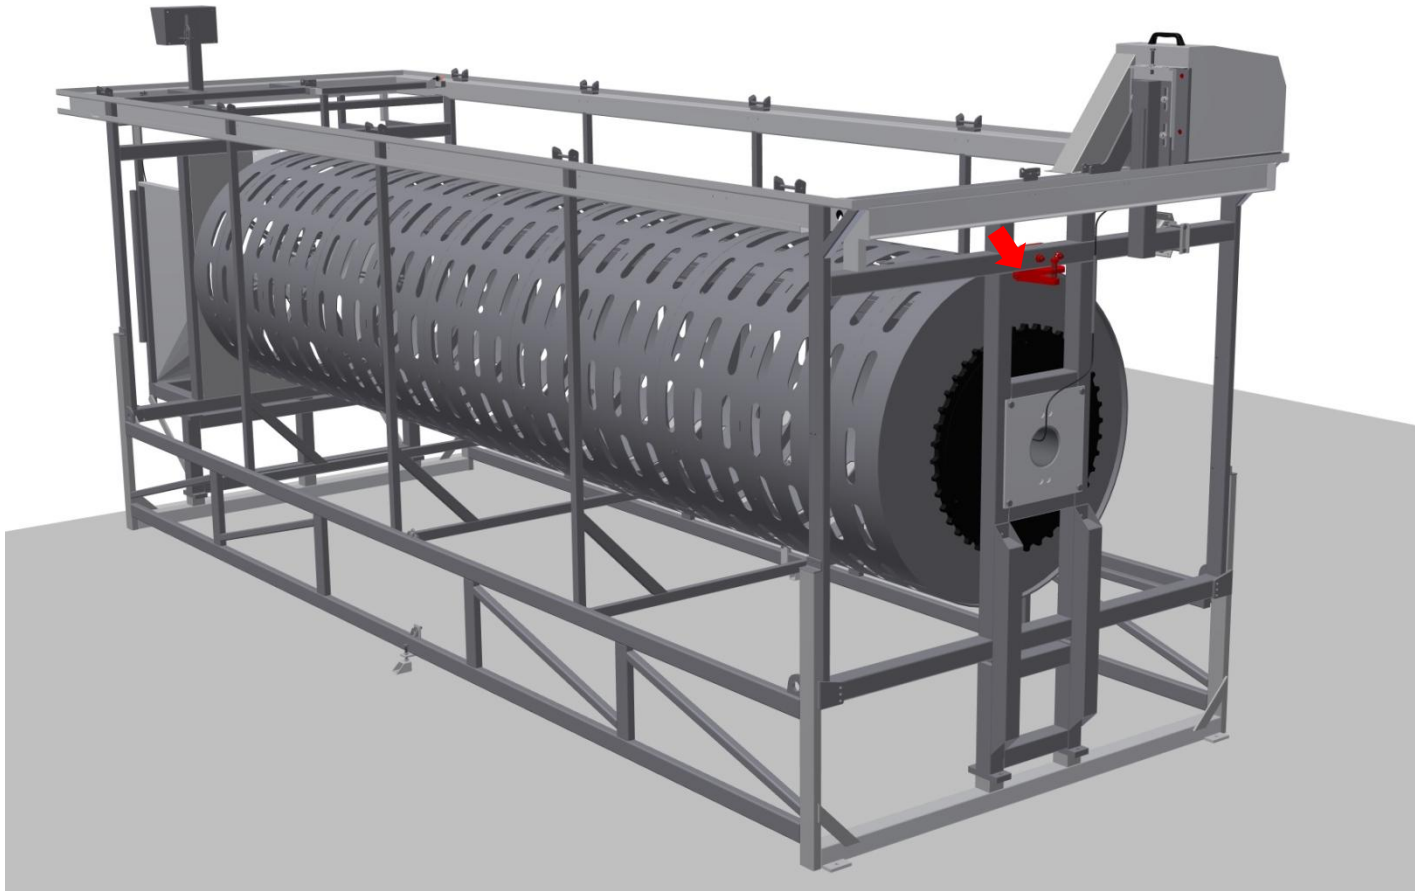


Disassemble Effluent Bearing

- Adjust the drum lifting device until the arm supports the drum

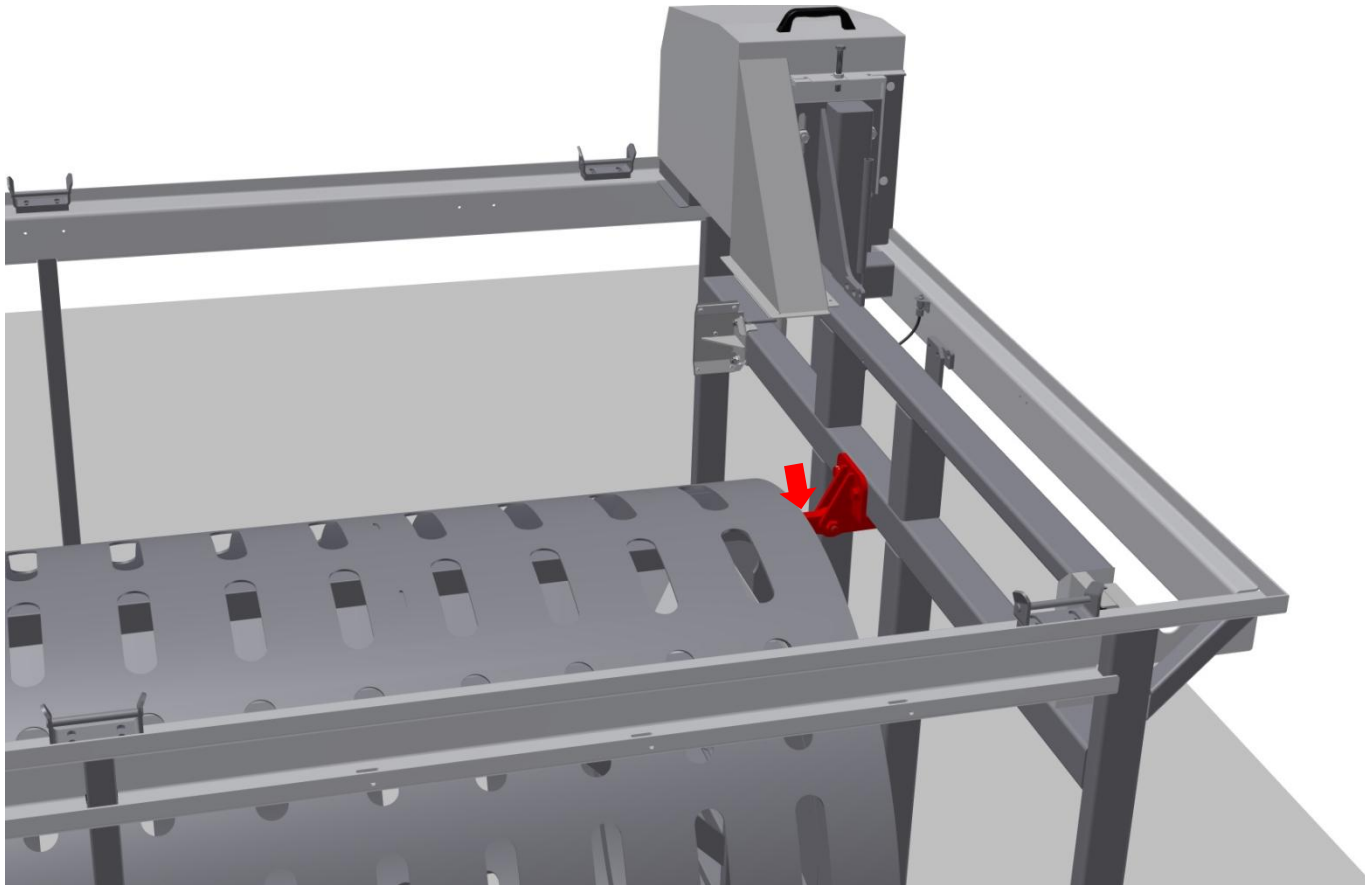


Disassemble Effluent Bearing

- Support the solids tray with a strap

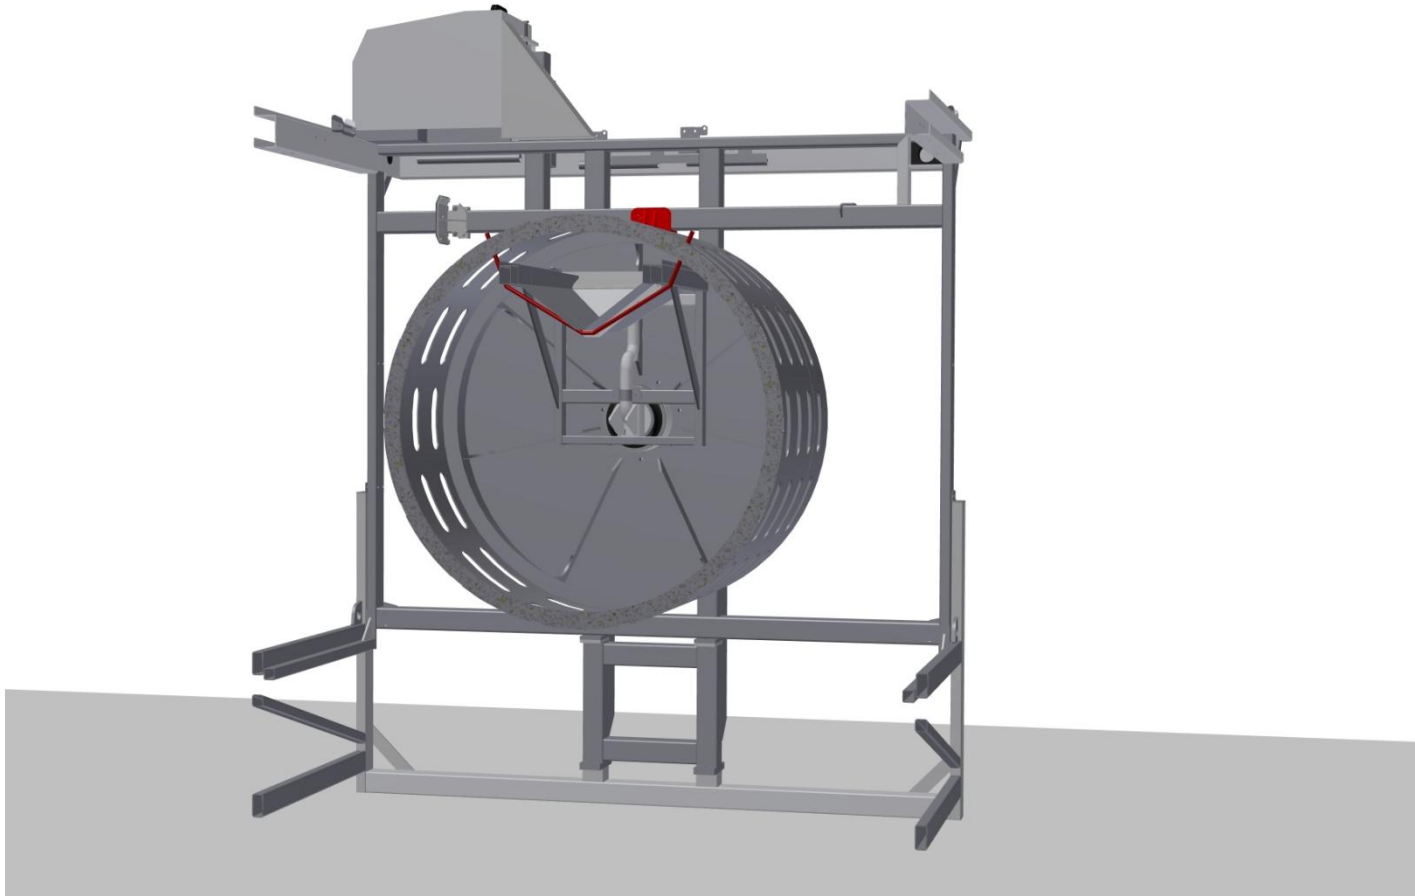


Disassemble Effluent Bearing

- Remove the effluent center shaft unit

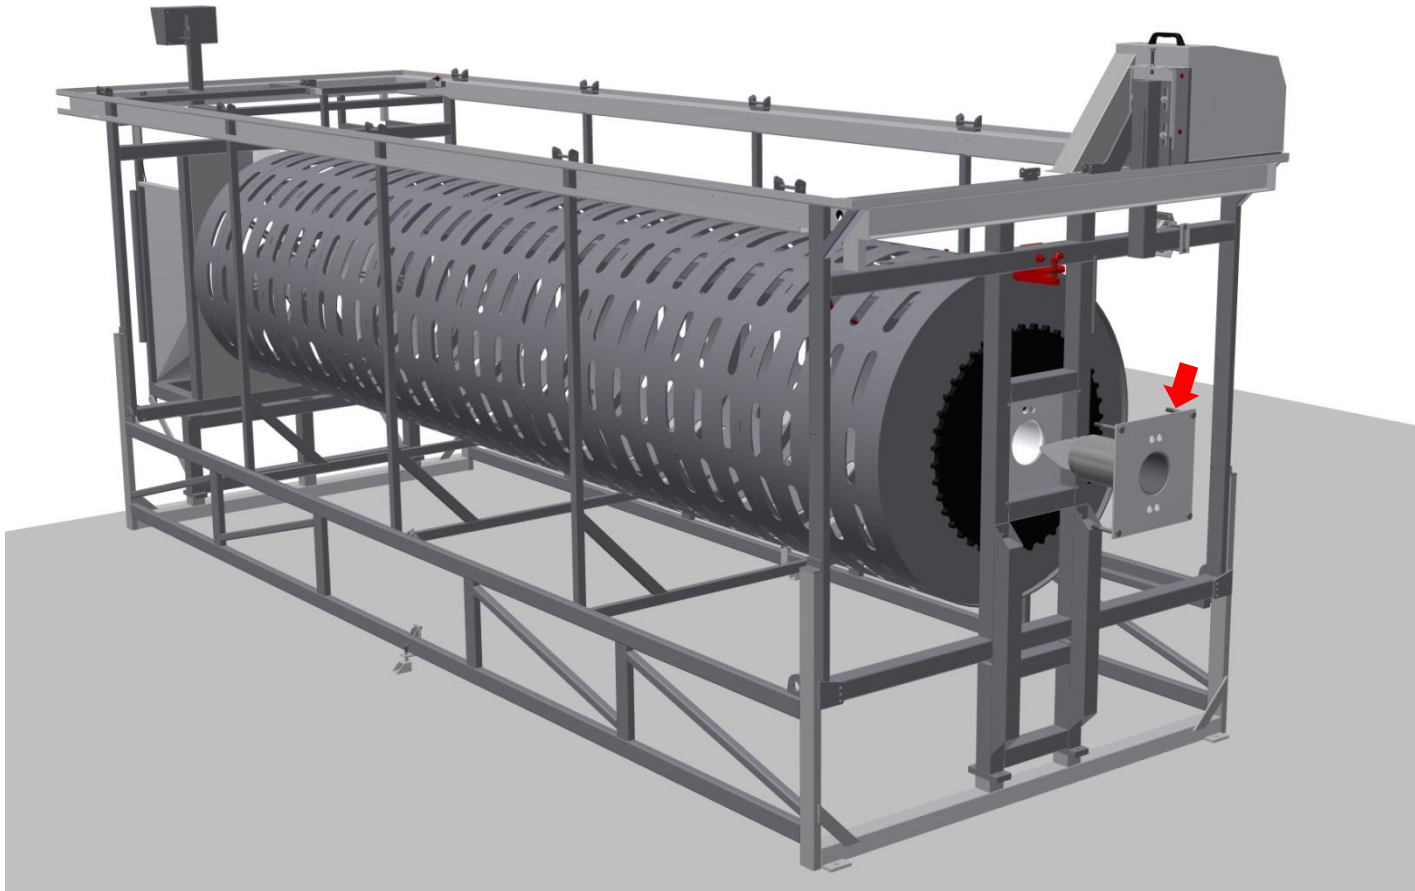


Disassemble Effluent Bearing

- Remove the axial bearing

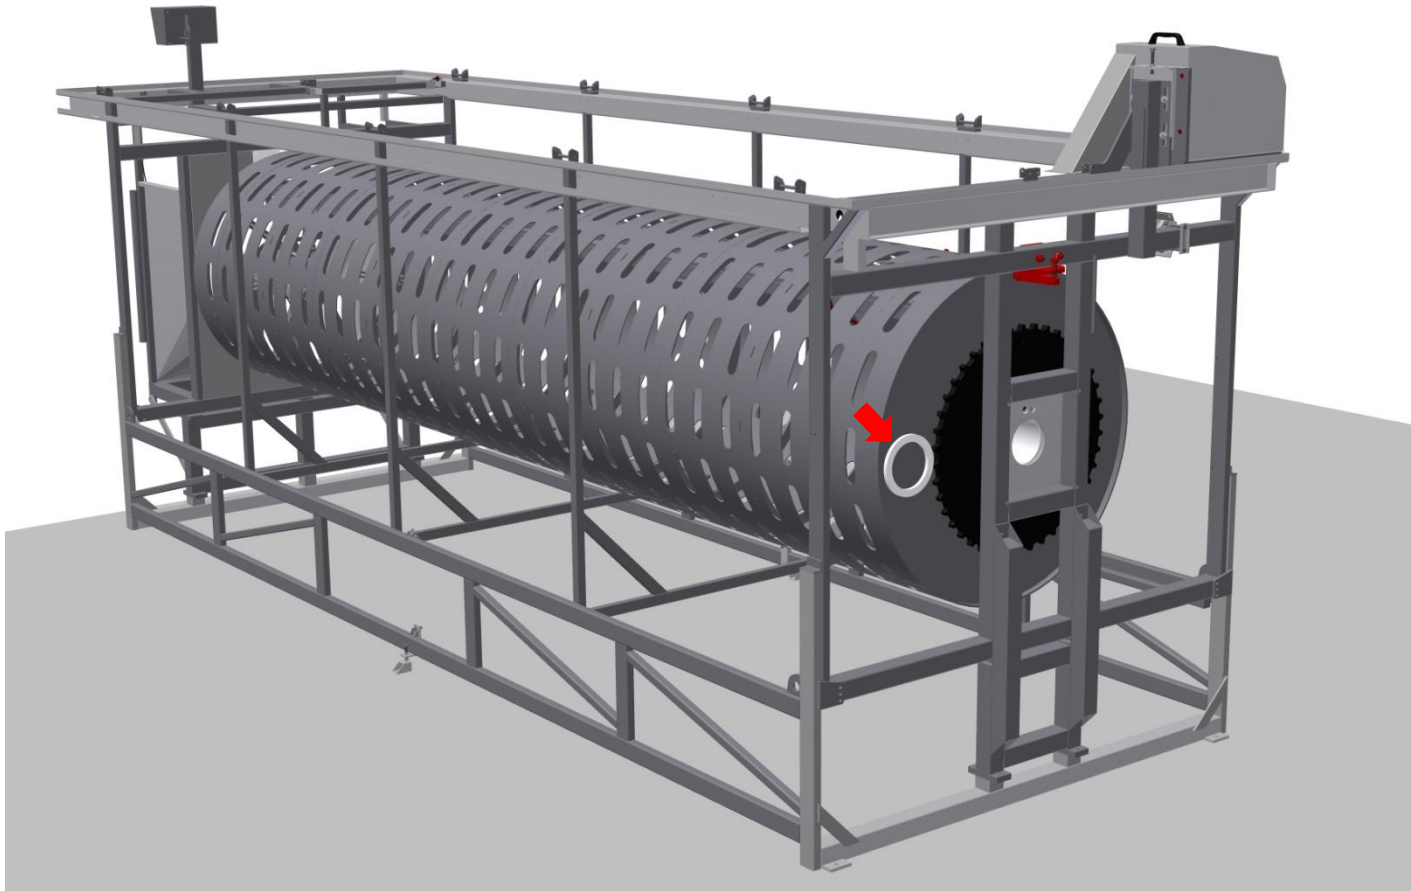


Disassemble Effluent Bearing

- Remove the effluent center shaft bracket

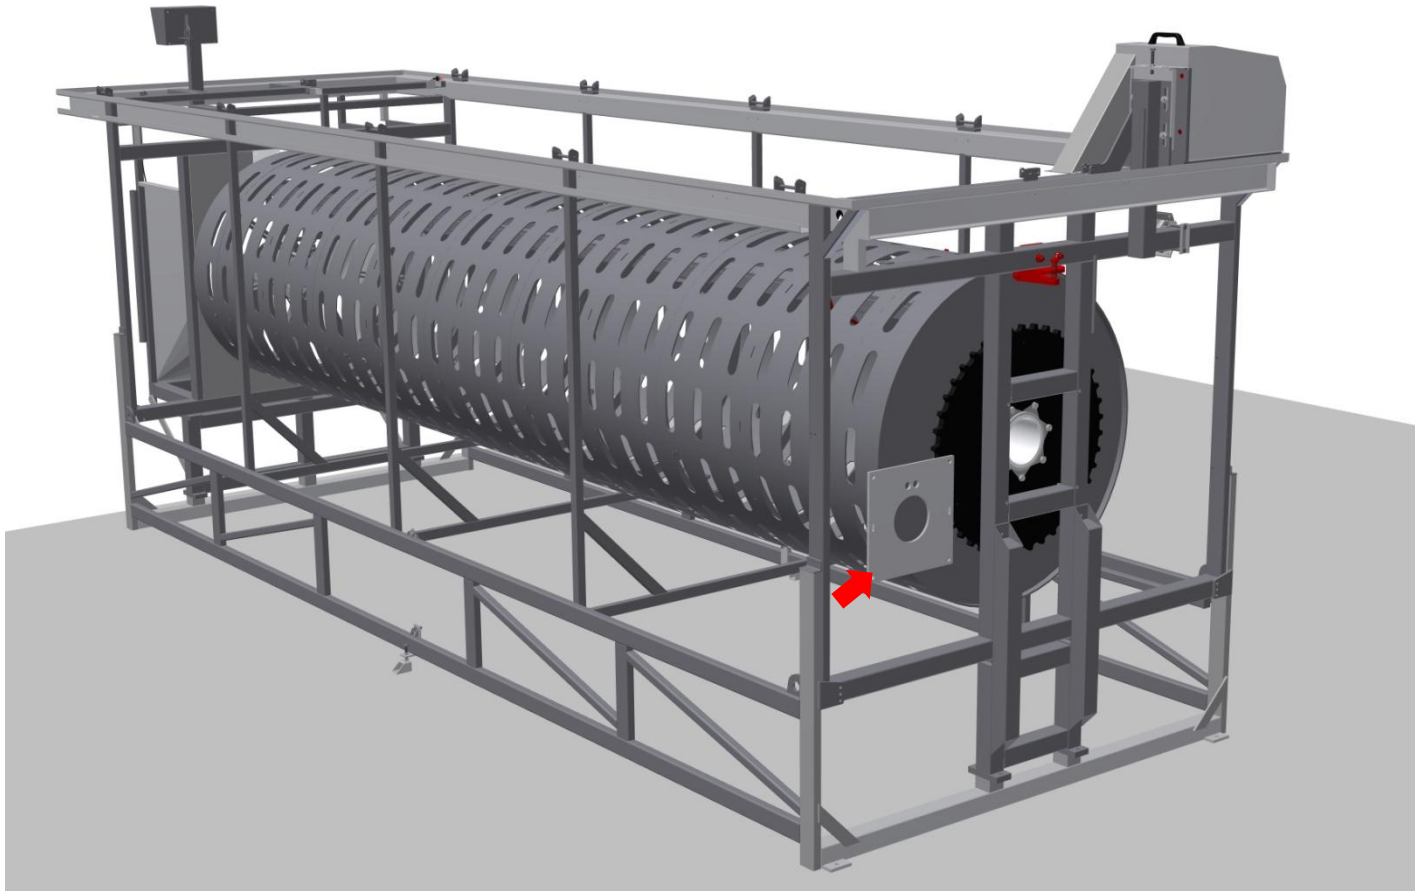


Disassemble Effluent Bearing

- Remove the screws and the locking plates

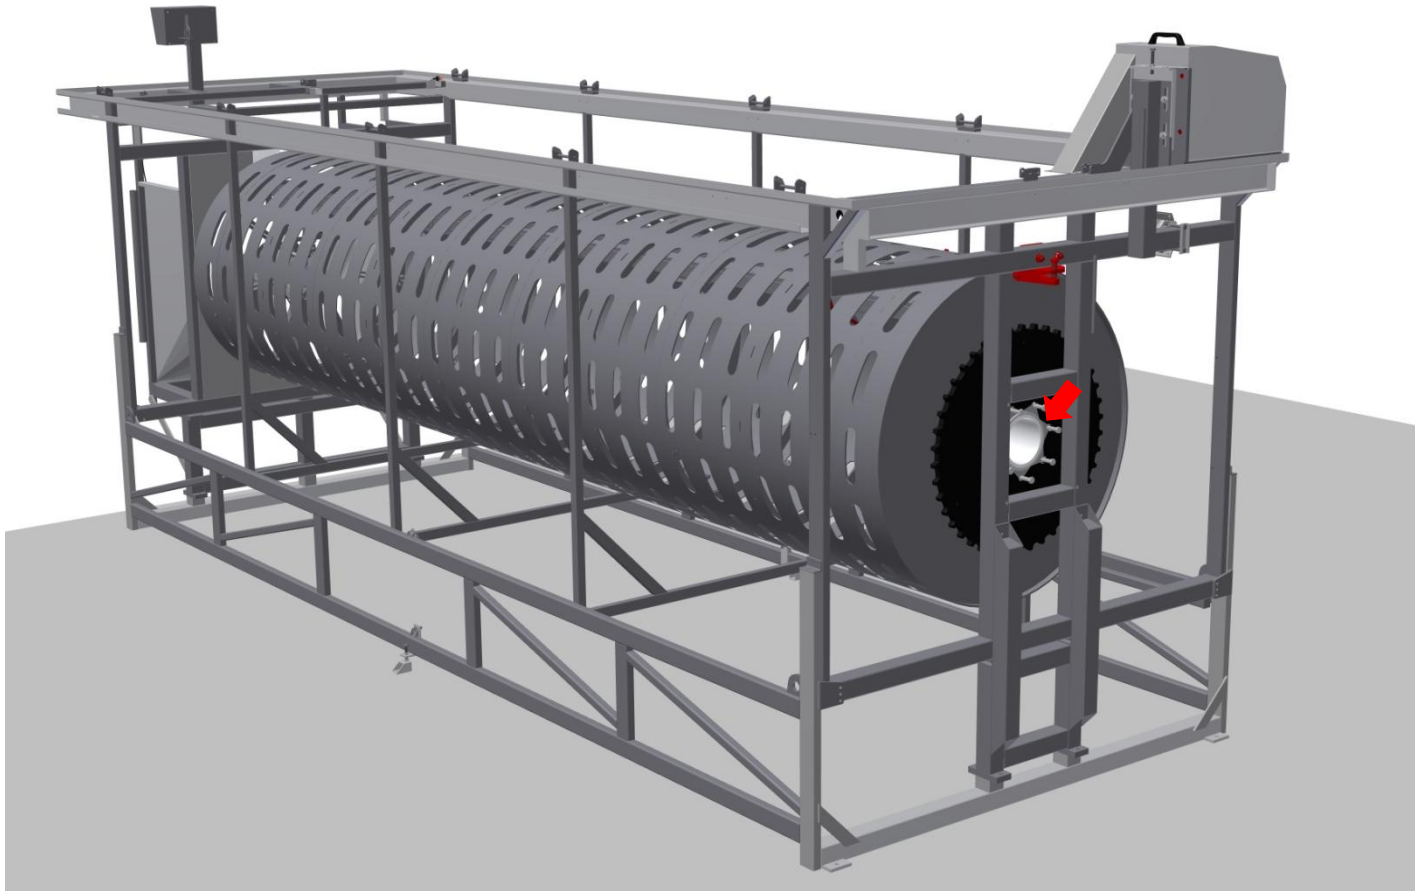


Disassemble Effluent Bearing

- Remove the drive sprocket

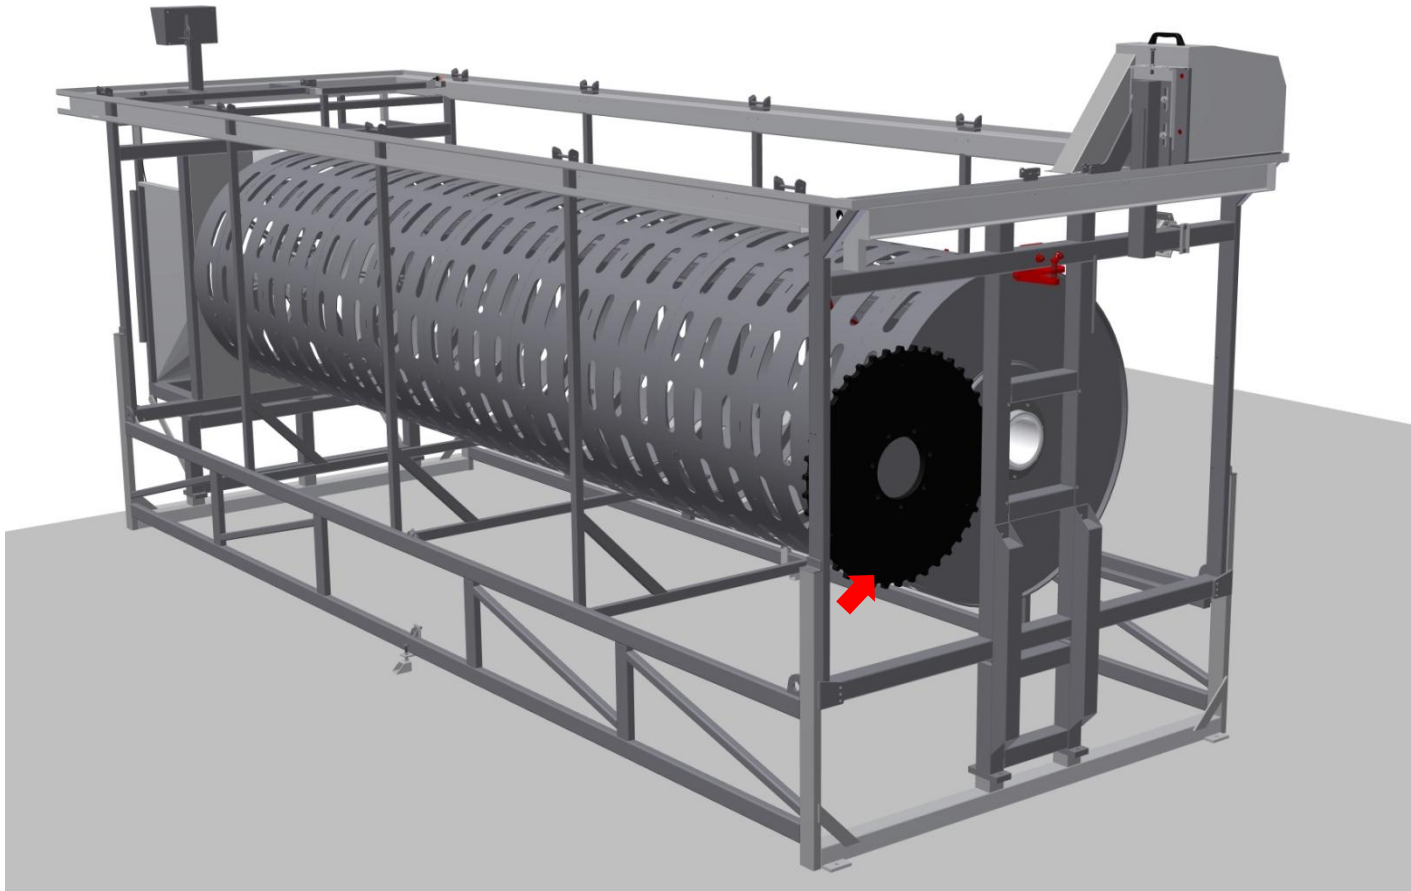


Disassemble Effluent Bearing

- Remove the distance and the *effluent bearing unit*

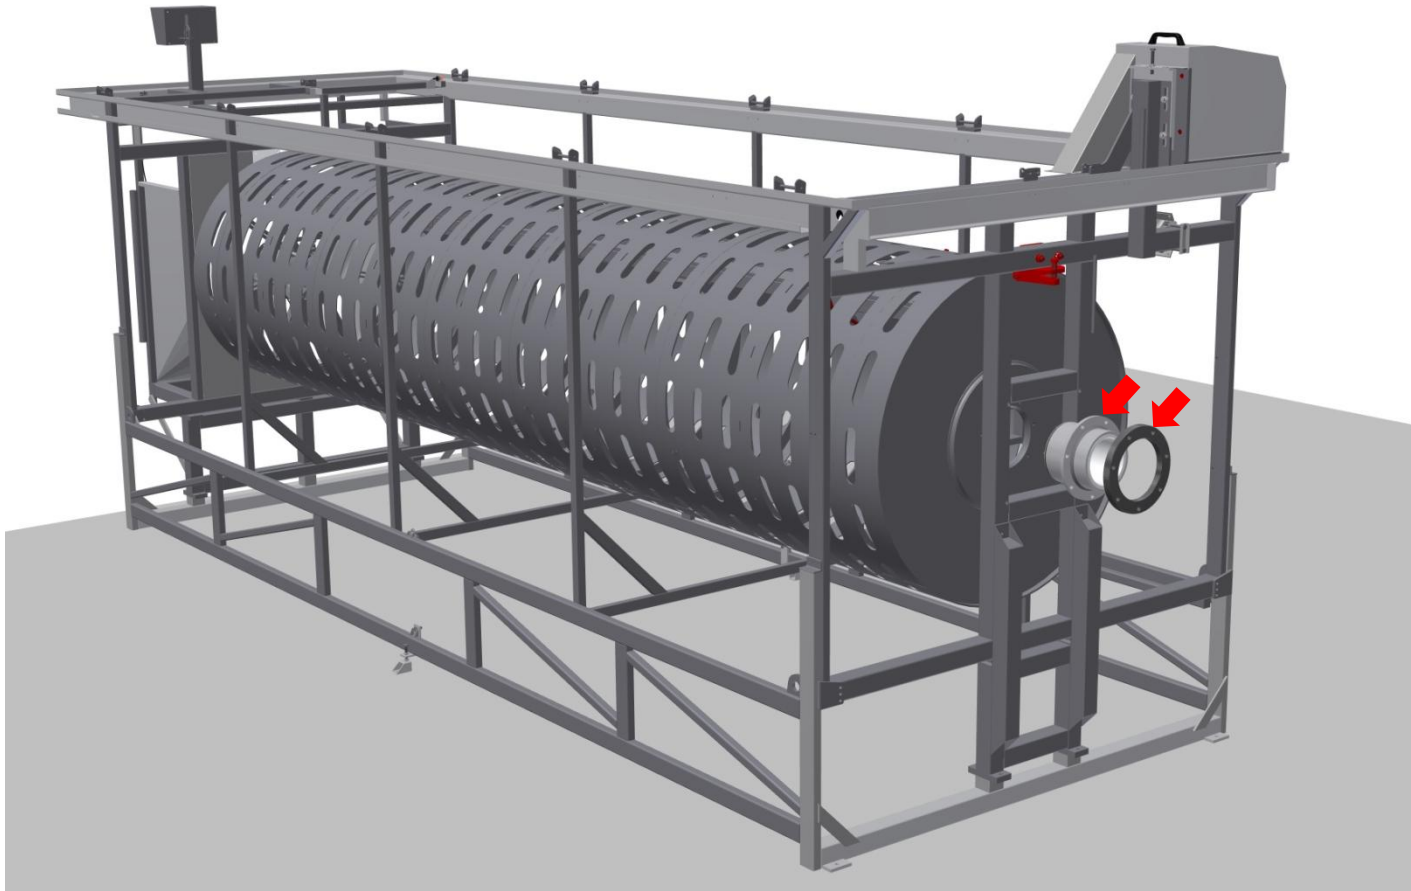

Disassemble Effluent Bearing

- Disassemble the effluent bearing unit

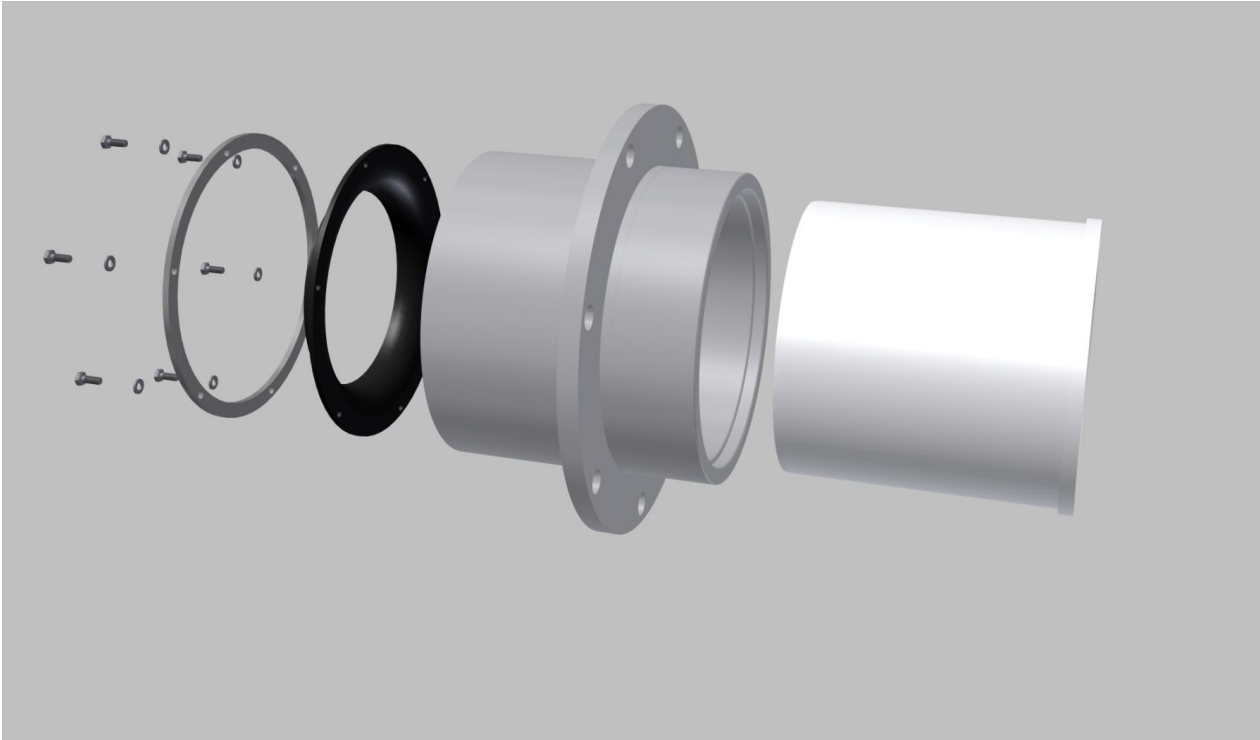

Disassemble Effluent Bearing

- Use suitable equipment when mounting the new slide bearing

